


INSTRUCTIONS
FOR USING
AIRES 35-V

C O N T E N T S

Description of Parts		Operating Instructions	14
(front, rear and bottom view)	2, 3	Loading	14
Introduction of Aires 35-V	4	Determining Exposure with Aires	
Interchangeable Lens System	5	Built-in Exposure Meter	16
Characteristics of the Aires		Focusing	17
Interchangeable Lenses	6	Holding the camera when taking	
Changing the Lens	8	pictures	18
Removing the Lens	8	Framing	20
Setting the Adjustable Depth		Taking the picture	20
of Field Ring	9	Unloading the camera	20
Replacing the Lens	10	Miscellaneous Information	22
Trimming Coupled Range-Viewfinder	11	Self-timer and Cable Release	22
Rapid Winding of Film and Cocking		Depth of Field of the Lenses and	
of Shutter	12	their Utilization	22
Flash Synchronization and		Depth of Field Charts	24, 25, 26
Intentional Multiple Exposures	13	The care of your camera	27
Infrared Marking (The Red R)	14		

AIRES 35-V Description of Parts

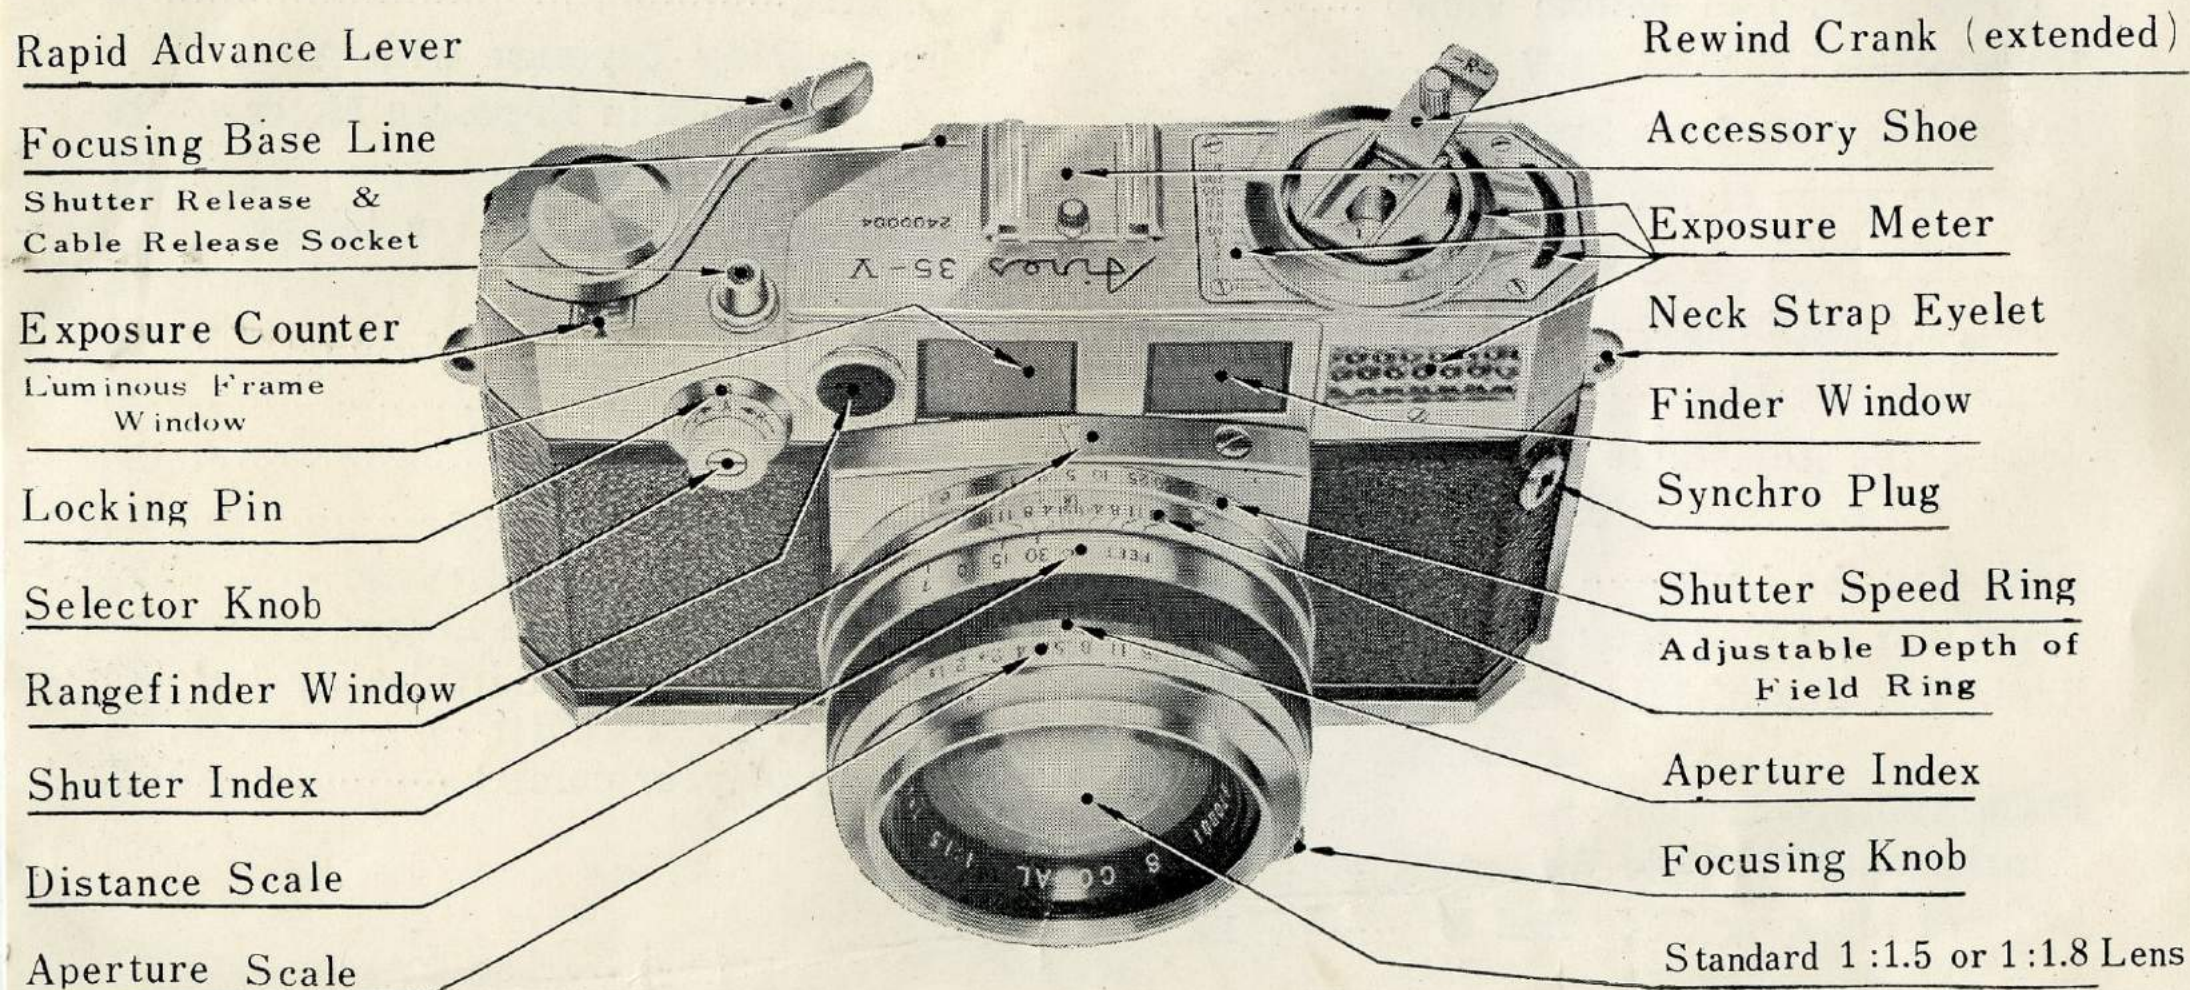

Eyepiece

Rewind Shaft

Film Guide Rails

Cartridge Chamber

Back Cover Release

Shutter Blades

Sprocket

Slot

Spool

Film Guide Roller

Pressure Plate


Release Pin

Alignment Bar Groove

Synchro Switch Lever

Red Dots

Tripod Socket

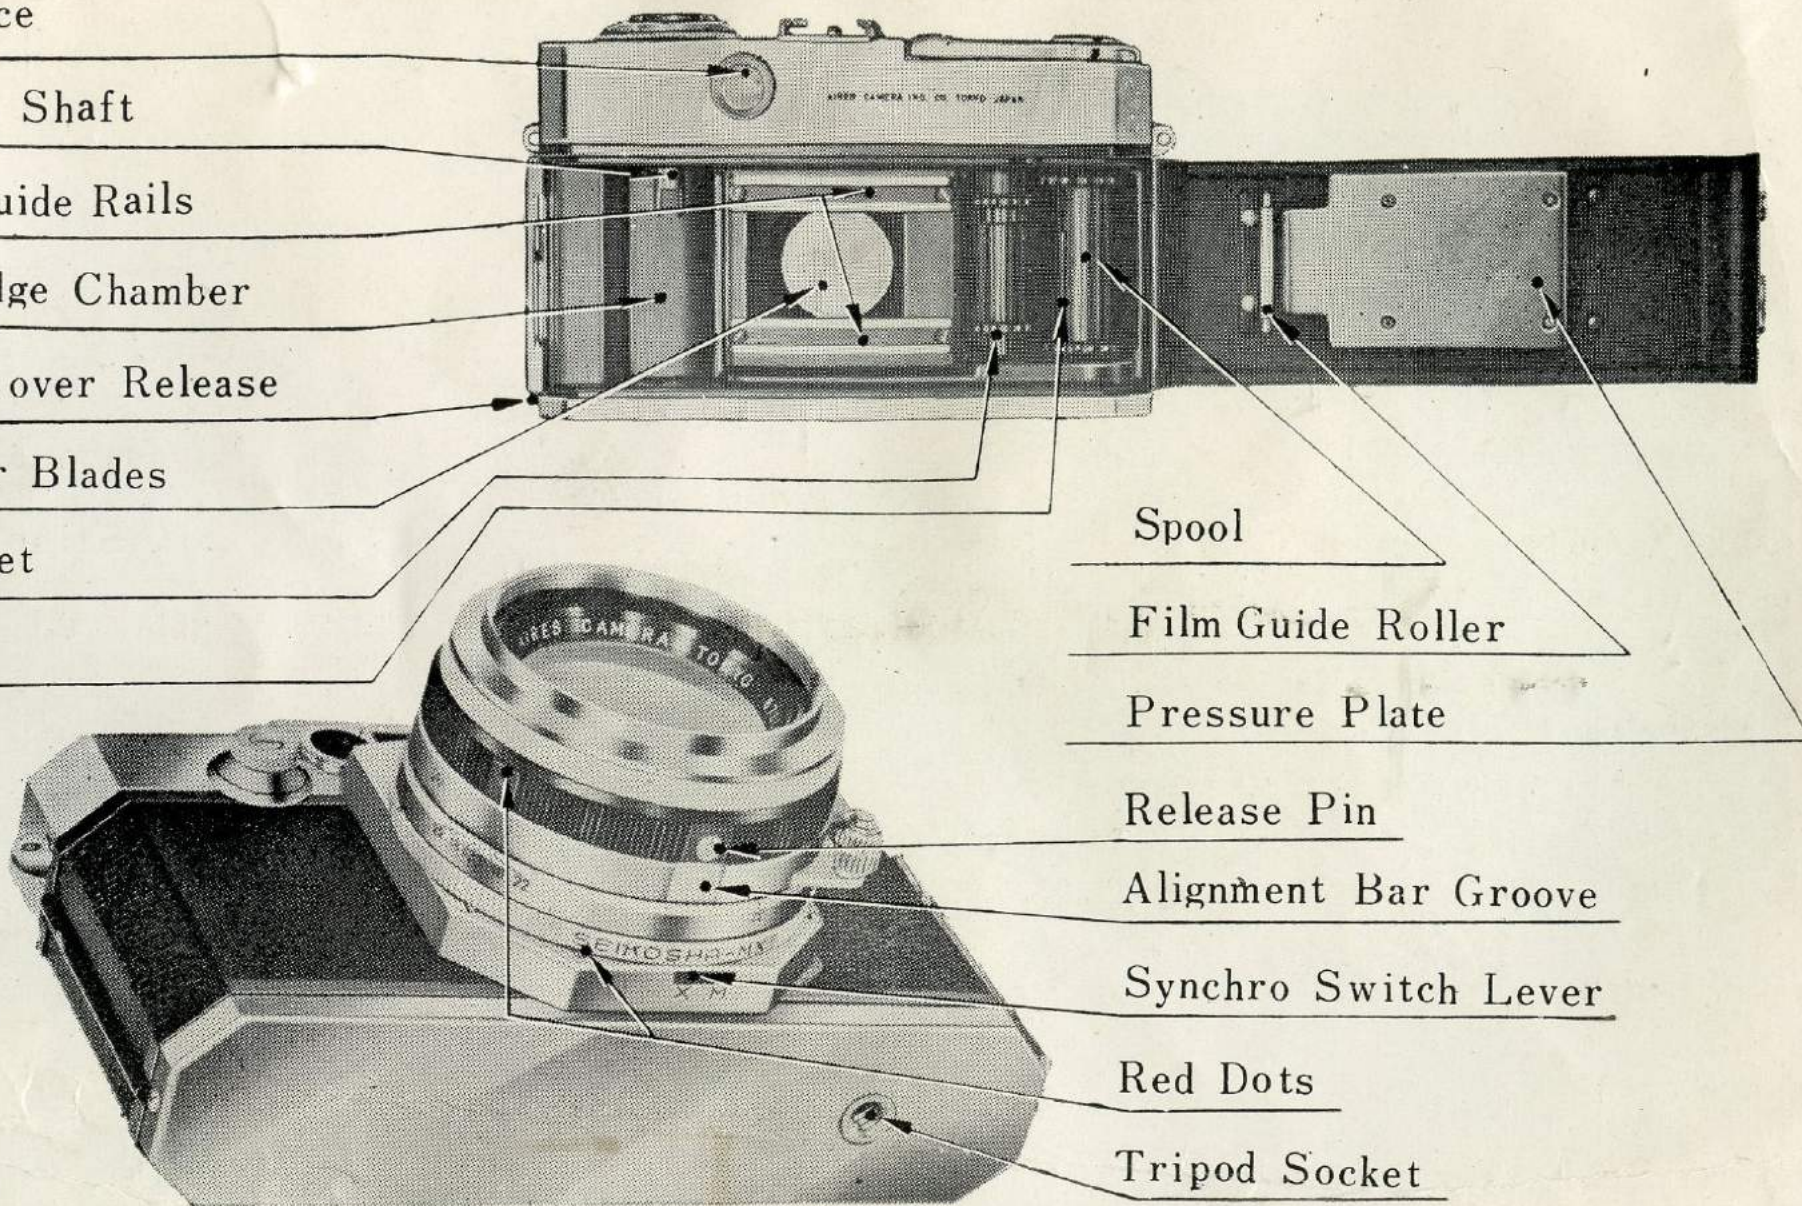

Introduction of Aires 35-V

Combining precision, versatility, ease of operation, plus the outstanding features the consumer has come to expect from Aires, the New Airès is a compliment to the skill of the camera maker's art. A high precision, specially designed Seikosha MX shutter gives consistent exposures over the entire scale—action stopping $1/400$ sec. to the slow full second for night scenes and available light photography—all of this and full synchronization for electronic and standard flash. The built in exposure meter provides accurate determining of exposure in all situations—daylight, indoors or in dim light with the amplifier cell. Rapid advance lever and rewind crank provides fast shooting plus speedy reloading. Smooth jar-free shutter release allows hand-held exposures at slower speeds. Quiet shutter for distraction free shooting in the studio or when working with models. Dependable, accurate, coupled rangefinder—view finder for all three lenses with provision for parallax correction in close-up photos. Handy drop-out film loading chamber. Engraved depth of field scale for all lenses. Double exposure prevention is automatic but may be made by turning the advance and rewind selector knob to "D". Amplifier cell's electrical connection is built into the accessory shoe. Automatic back cover lock. All of these features plus many others make the Aires 35-V the most outstanding camera to come from Japan in recent years.

Interchangeable Lens System

The outstanding feature of the new Aires 35-V is its completely integrated interchangeable lens system. The integrated concept was achieved by specifically designing a behind-the-lens-shutter and body to match the outstanding advances of our optical specialists. Three completely new lenses, wide-angle, standard and telephoto incorporating the latest technical advances of the Japanese optical industry, were designed specifically for the integrated interchangeable-lens-shutter camera utilizing the basic Aires camera design as a starting point. With the completion of these new lenses the new camera was designed to match, feature to feature, the best in existing Aires cameras and those outstanding properties of the new lenses. The camera possesses the ability to cope with almost any picture situation likely to be encountered by the user of a 35mm camera. Snapshots, action, sports, scenics, and many more come within the scope of the Aires 35-V.

Three completely new lenses, standard wide-angle and telephoto, were specially designed for the Aires 35-V. Particular attention was given to the integrated concept for matching three different focal lengths to a single bayonet focusing mount. Although new in design, none of the optical corrections essential to fine, precision 35mm photography were overlooked. Color corrections, longitudinal and lateral, have been carried out to a high degree. All lenses are hard coated to increase shadow detail and prevent flare. Mounted in precision—machined, matched bayonet mounts to assure permanent accuracy of focus, all have superb definition and resolving power.

Characteristics of the Aires Interchangeable Lenses

Standard Lens

This lens combines high speed and resolving power to cover a wide range of everyday photography. It is extremely useful in available light photography or for sports where high shutter speeds require a large diaphragm opening. Its superb definition makes it an excellent lens for general photography.

S Coral, $f=4.5$, F 1:1.5, 7 elements 4 groups (H Coral, $f=4.5$, F 1:1.8, 6 elements 4 groups)

Sharp Image Field : $50^{\circ} 30'$

Perpendicular Angle of View : 29°

Horizontal Angle of View : 43°


Diaphragm Openings : 1.5, 2, 2.8, 4, 5.6, 8, 11, 16 (1.8, 2.8, 4, 5.6, 8, 11, 16)

Lens Mount: Exclusive Bayonet Mount

Lens Front Attachment Size : Filter screw

ϕ 49 P=0.75


Outside Dimension ϕ 51

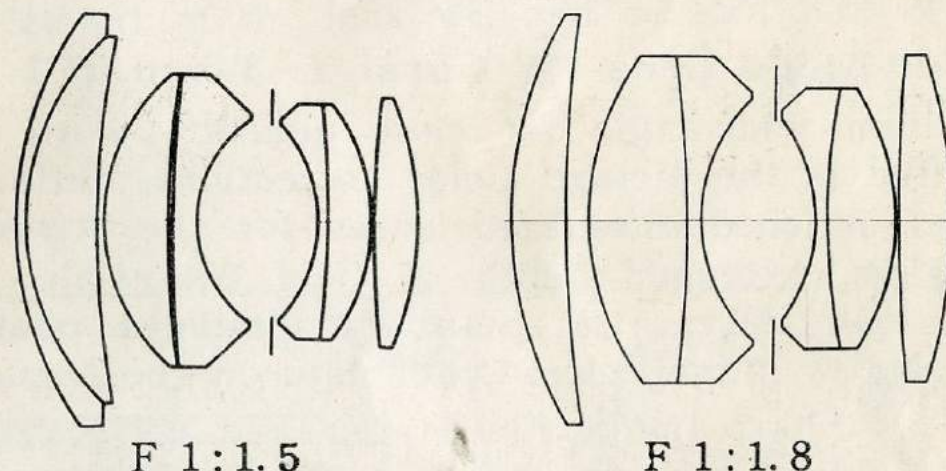

Telephoto Lens—Tele Coral, $f=10\text{cm}$. F 1:3.5, 5 elements 3 groups

High speed, long focal length combined with high resolving power and definition plus superb color correction make this lens ideal for distant subjects and formal or informal portraiture. Image size is about twice that of standard lens. Focusing range is 7 feet to infinity. Other data on the lens are as follows:


Sharp Image Field : 24°
 Perpendicular Angle of View : $13^\circ 30'$
 Horizontal Angle of View : 20°
 Diaphragm Opening : 3.5, 4, 5.6, 8, 11, 16, 22
 Lens Mount : Exclusive Bayonet Mount
 Lens Front Attachment Size : Filter screw : $\phi 62$ $P=0.75$
 Outside dimension : $\phi 65$
 Weight : approx. 13 ozs.

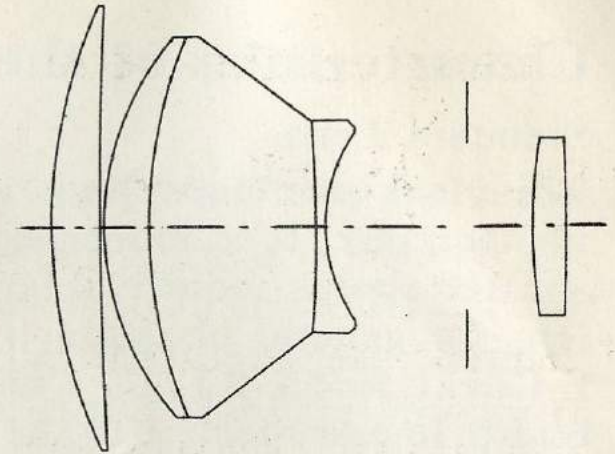

Wide-Angle Lens—W Coral, $f=3.5\text{cm}$. F 1:3.2, 4 elements 3 groups

Medium wide-angle for close quarters work and where a large portion of the subject is desired in the picture. Color corrections, definition, resolving power are comparable to the other matched integrated lenses for the Aires 35-V. Short focal length of W Coral lens provides extended depth of field potentials. Focusing range is 2-2/3 feet to infinity. Also useful for dim-light photography. Bayonet mount couples to rangefinder. Other data on the lens are as follows:

Sharp Image Field 63°
 Perpendicular Angle of View $37^\circ 30'$
 Horizontal Angle of View 54°
 Diaphragm Openings 3.2, 4, 5.6, 8, 11, 16, 22
 Lens Mount : Exclusive Bayonet Mount
 Lens Front Attachment Size : Filter screw $\phi 49$ $P=0.75$
 Outside dimension : $\phi 51$
 Weight : approximately 5 ozs.

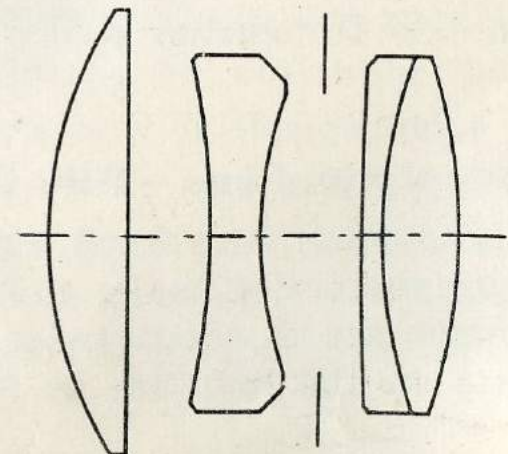


Changing the Lens


The Aires 35-V camera has an exclusive bayonet mount on the front which permits the removal and replacement of the interchangeable lens with speed and ease. When changing the lens, do so carefully. Especially, in replacing, be sure it is securely fitted to the lens mount. Care should be taken that the rear element of the lens will not be scratched when changing lens.

Removing the Lens

Set the distance scale to infinity (A). by turning the focusing knob. Push the pin at the bottom of the lens barrel and simultaneously turn the knurled black ring counter clockwise until it stops (B). Now pull lens away from camera body.

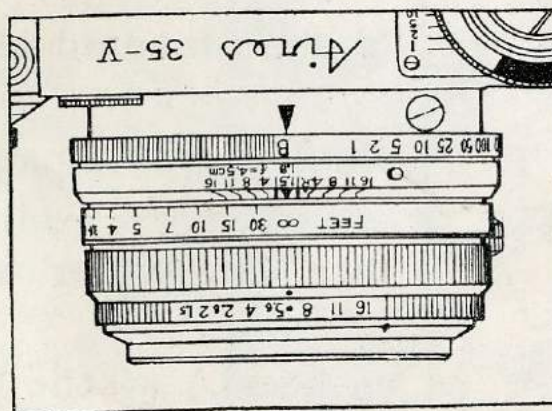

(A)

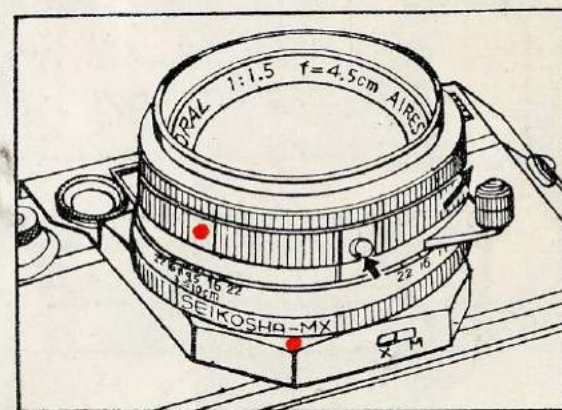


(B)

Setting the Adjustable Depth of Field Ring

Don't turn the Depth of Field Ring unless the lens is removed



For the three different lenses (Standard, Telephoto and Wide-Angle) there are three different Depth of Field markings engraved on the Depth of Field Ring as in the illustration on the right (A).

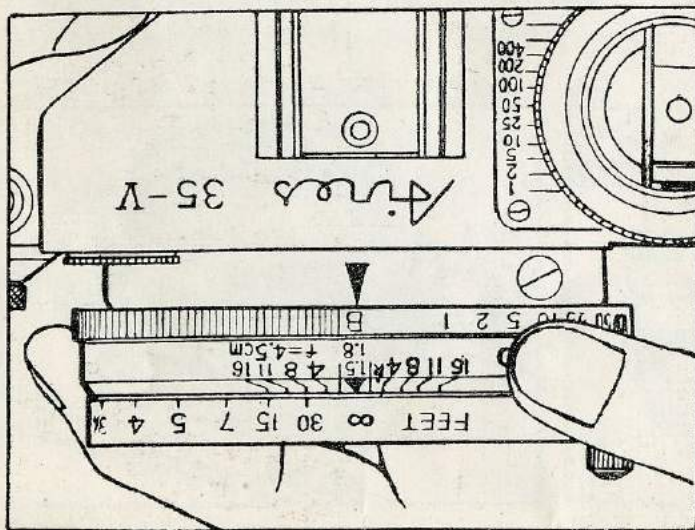

(B)

Press the small pin on the left side of the Standard lens Depth of Field Ring engraving and simultaneously

turn ring either way so that the focal length (4.5cm., 10cm. or 3.5cm.) of the lens you are going to use is set at the red triangular mark on the shutter cover (B).

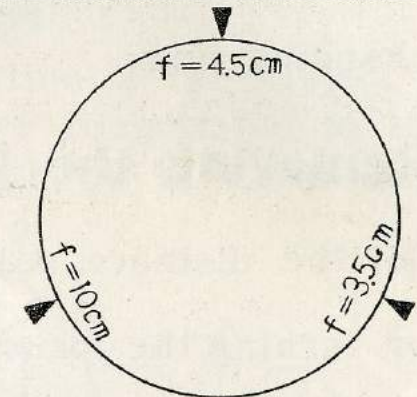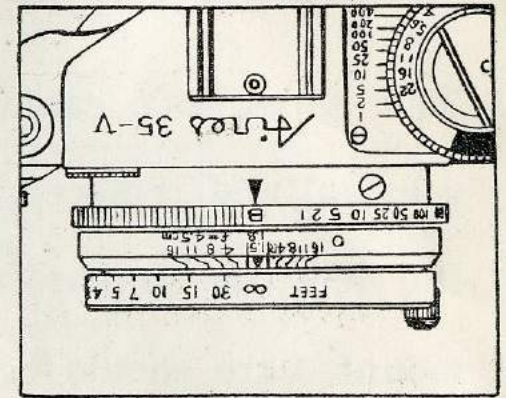


(A)

Replacing the Lens


Standard lens—Set the distance scale to infinity. Line up the red dot on the lens barrel to the red dot on the shutter cover (A). Turn the knurled black ring clockwise until it stops (B). Now, you have replaced the lens.

Telephoto lens—Set the distance scale to infinity. Set the two red dots on the lens barrel in line with each other. Now, set these two red dots in line with the red dot on the shutter cover and simultaneously insert alignment bar into groove (C). Turn the knurled black ring clockwise until it stops with a click (D). The telephoto lens is now securely in its place.


Wide-Angle lens—Set the distance scale to infinity. Set the two green dots on the lens barrel in line with each other. Now, set the red dot on the lens barrel to the red dot on the shutter cover and simultaneously insert alignment bar into groove (E). Turn the lens barrel clockwise until it stops with a click (F). The wide-angle lens is now securely in its place.

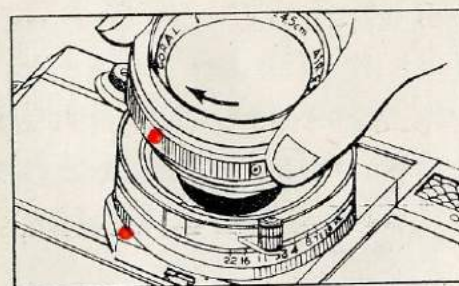


(A)

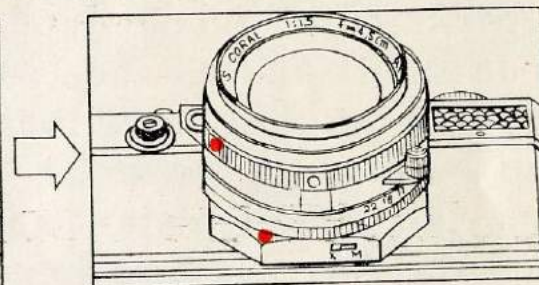


(B)

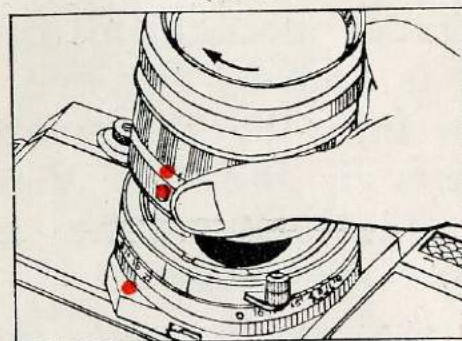


(C)

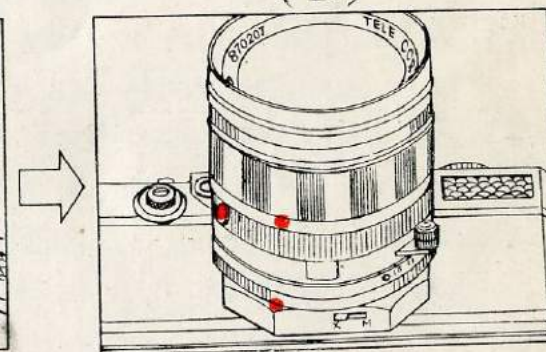

(D)

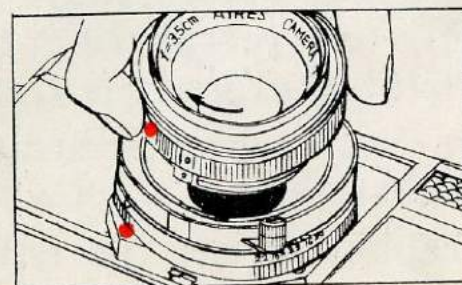

(E)

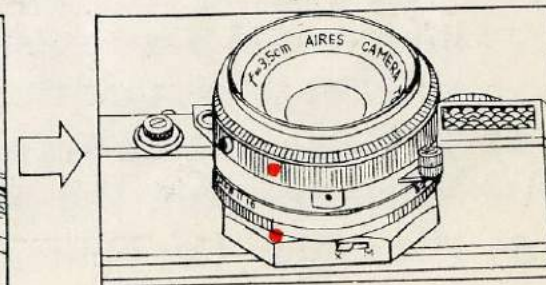


(F)

“Trimming” Coupled Range-viewfinder

The Aires 35-V is equipped with a “trimming” coupled range-viewfinder mechanism of the super-imposed image type, with a single eyepiece. As the illuminated frame of the viewfinder is brilliant and as the two rangefinder images are very clear, it is easy to coincide them and to focus as close as 32 inches with the standard lens. The illustration shows the wide field that can be seen through the viewfinder eyepiece and the illuminated frames. With the telephoto lens the closest distance is 7 feet and with the wide—angle lens the focus range is the same as with the standard lens.

The “trimming” range-viewfinder has the following 5 advantages:

- 1) With the Aires viewfinder mechanism, the subject shown in the frame is recorded by the lens exactly as it is seen by the eye.
- 2) As only the subject within the illuminated frame is recorded by the lens and as the actual view seen through the full viewfinder is much larger in area, the photographer can frame and compose his picture very easily.
- 3) Fast moving objects passing through the field of view can be seen an instant before they enter the illuminated frame itself, thus permitting the photographer to capture the subject at just the right instant.
- 4) The illuminated frame will allow accurate composition in even the poorest light.
- 5) It enables the photographer to see the entire image accurately even if he wears spectacles.

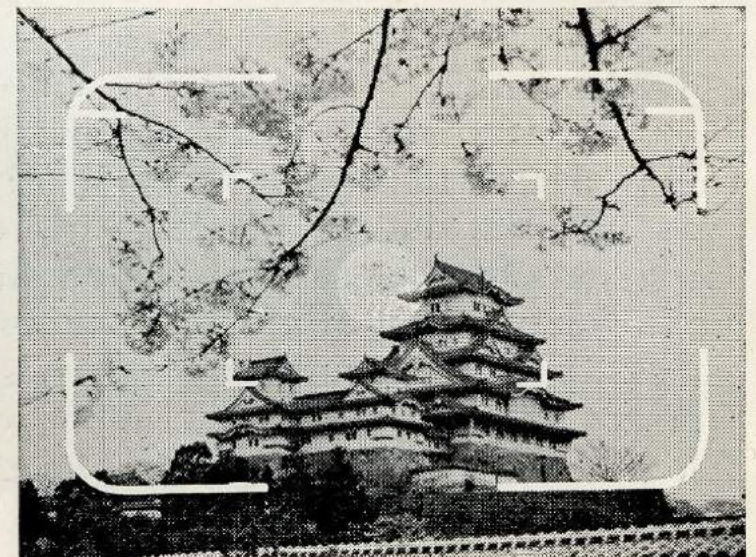


Rapid Winding and Cocking of Shutter


The Aires 35-V is so designed that both film advance and shutter cocking can be performed at one and the same time, very rapidly, by means of the Rapid Advance Lever used as follows:

- 1) Push the cove at the right corner of the lever with your index finger, and the lever comes into operating position (A).
- 2) Put your thumb alongside the Lever as in illustration (B) and turn it to the right until it stops (C).
- 3) Let your thumb slip off the Lever and it will return to position (D), ready for next picture.


The film has now been advanced one exposure and the shutter cocked. Since the shutter cannot be released if you stop the Lever halfway, it is necessary that it should be turned until it goes no further. Double exposures are perfectly prevented. Since the Shutter Release is so conveniently located the index finger of your right hand fits over it naturally when you hold the camera. You can wind the film and release the shutter very rapidly, at the rate of 12 exposures per 10 seconds.

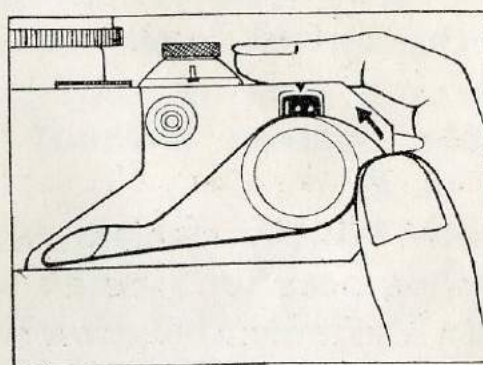


(A)

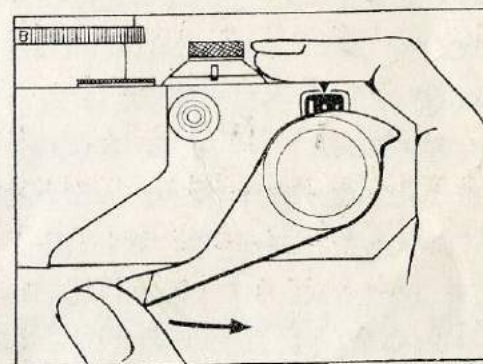

(B)

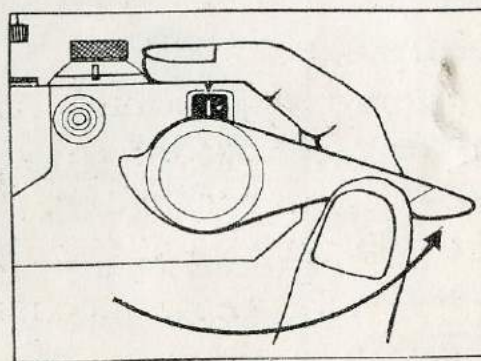

(C)

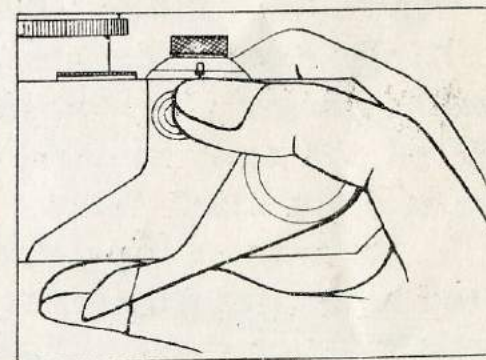


(D)


Flash Synchronization and Intentional Multiple Exposures (A)

The Seikosha MX shutter has built-in synchronization for standard medium peak flash bulbs of the M class and electronic flash units having zero delay. Flash terminal is located on left front of the camera body and accepts European (RC) type synchro plugs. If you are using electronic flash unit turn the switch lever to X and to M if you are using M class bulb. (A)


Important: *When using the camera without flash equipment set the flash synchro switch to X.*

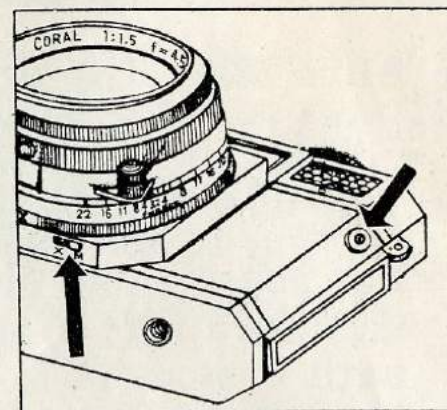

Although the Aires 35-V has built-in double exposure prevention device the designers added a provision to retain the photographer's right to take double exposures if he so desires. On the front of the camera is an advance and rewind selector knob with the markings of D, A, R standing for Double, Advance, Rewind (B). When double or multiple exposures are desired on one frame the locking pin is depressed and simultaneously the selector knob turned to "D" (C). By advancing the rapid wind lever the shutter is cocked but the film does not advance. Shutter is tripped in the conventional manner.

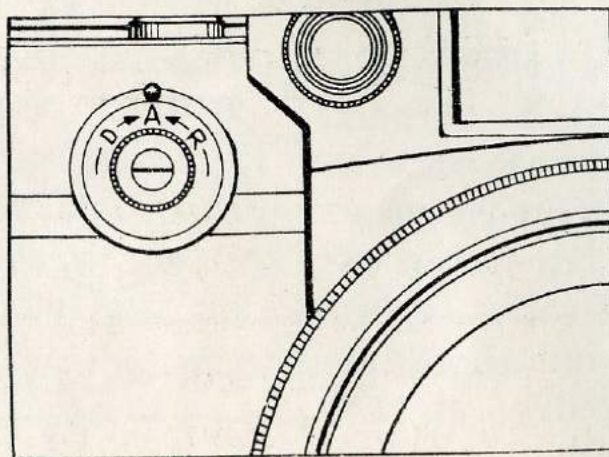

(B)

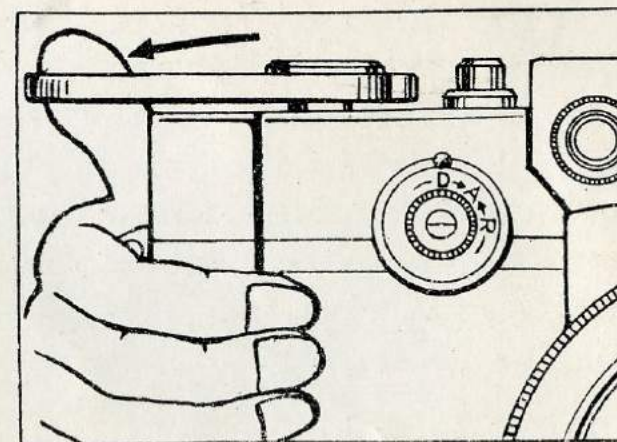

(C)

Infrared Marking (The Red R)


Infrared film takes pictures by infrared waves invisible to human eyes. Focusing with this film is different from regular film and the lens must be focused slightly in front of the visible subject. A red mark is provided on the depth of field scale ring to compensate for this difference. Focus the camera in the regular way with the rangefinder and set the distance focused upon to this compensating mark before shooting with infrared film. When using the wide angle lens the depth of field is so deep there is no need to adjust the distance setting.

OPERATING INSTRUCTIONS

Please read the following instructions carefully at least once to familiarize yourself with the Aires features. Handle the camera carefully and operate the various operating parts at least once before loading your first roll of film.


Loading

Place the camera face down on a table or other solid support and release the back cover lock by pulling down the lock release bar. The back cover will spring part-way open and may be opened fully by hand (A). Push upward on the slotted rewind shaft (B) (C) and insert a standard roll of 35mm cartridge film. Push the rewind shaft down until it engages the rewind

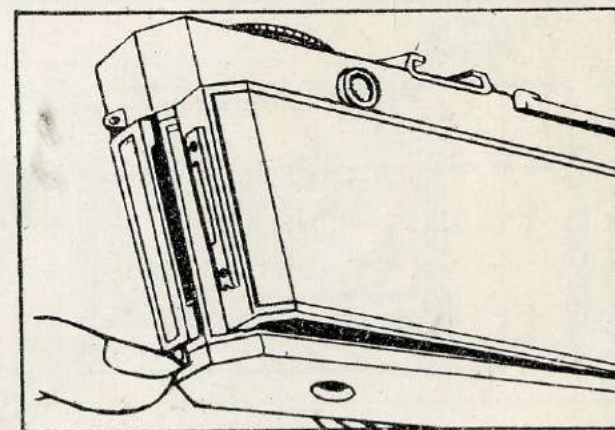


(A)


slot in the cartridge spool (D). Bend the film tip about 1/8 inch from the end, and insert the film tongue in the slot of the take up spool making sure the film is securely fastened and that the sprocket gears fit the film perforations (E) Secure the film on the takeup spool by 1½ turn of the take up spool and close back of the camera. Locking is automatic. Now take up the slack by turning rewind lever clockwise until tension is felt. Advance the exposed portion of the film by winding the advance lever and tripping the shutter twice or until the counter registers 1. Your Aires is now loaded.

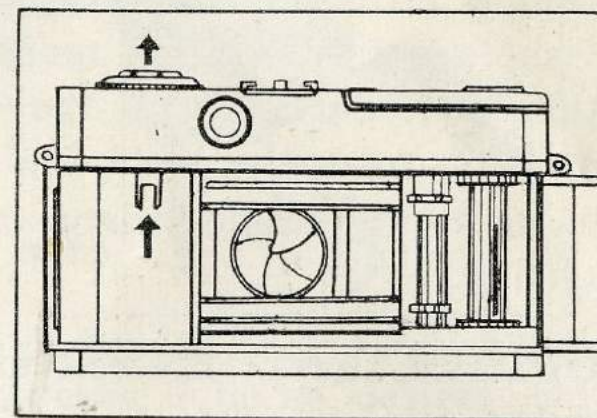


(B)

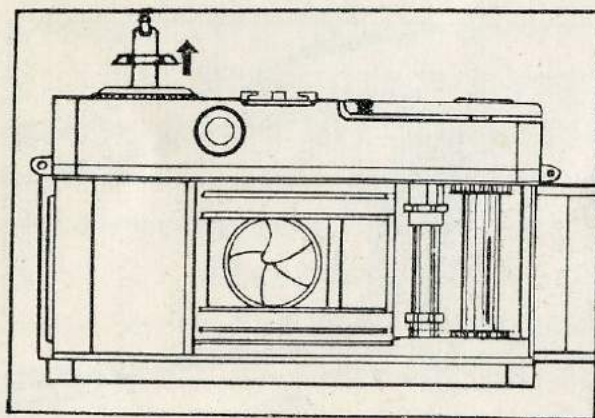

(C)

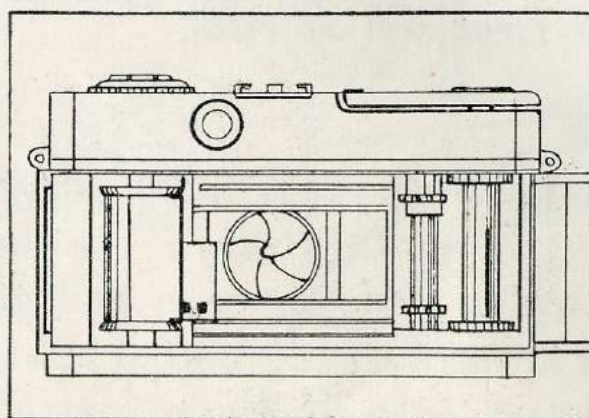


(D)

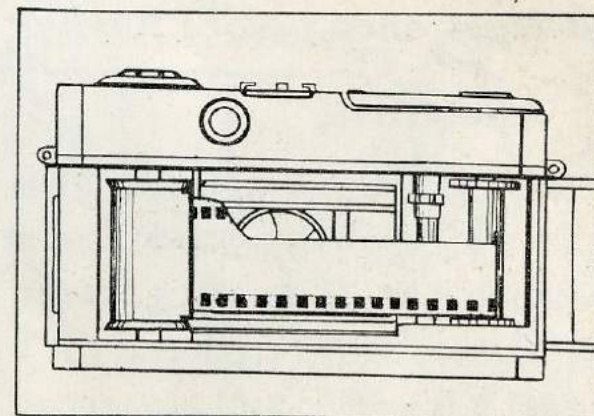


(E)

Determining Exposure with Aires Built-in Exposure Meter


1. Set the ASA rating of the film loaded in the camera in the following manner: (A)
 - a. Determine the sensitivity of your film. (ASA number)
 - b. Hold only the ASA and Aperture dial (knurled lower metal ring) with your left hand fingers and turn the small knob until the ASA number (in case ASA 100 film to 100) appears in the ASA window (B).
2. Point the photo-electric cell at the scene to be photographed. (In outdoor scenes point the cell slightly downward to minimize skylight reading.)
3. Set the Standard pointer ▲ on the ASA & Aperture Dial to this reading (C) and read the correct exposure from any of the combinations indicated on right of the exposure dial (D). Set the desired combinations to the shutter speed and aperture dials on the shutter and lens mount. Now, you are ready to focus the camera.

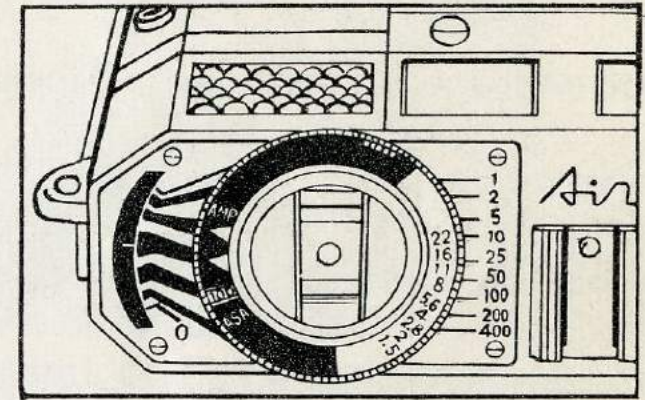


(A)

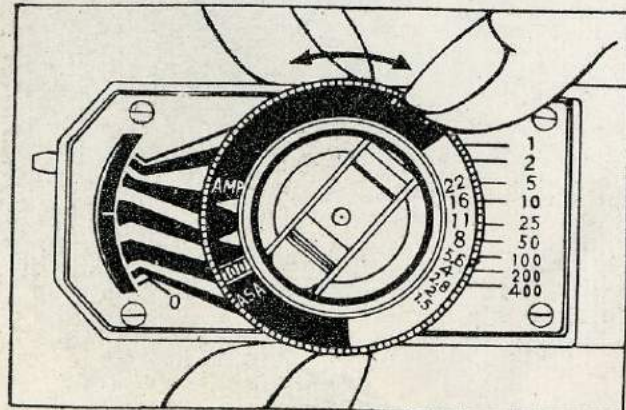

(B)

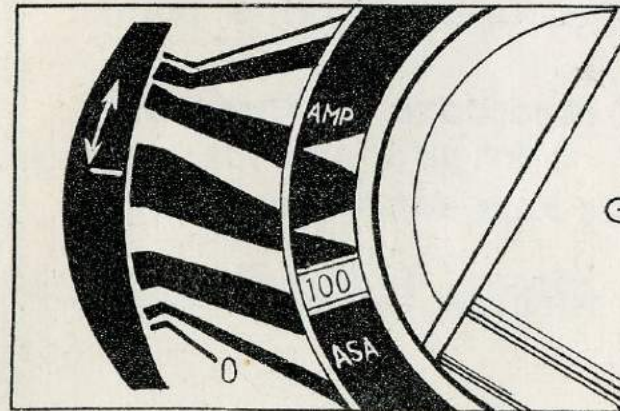

(C)

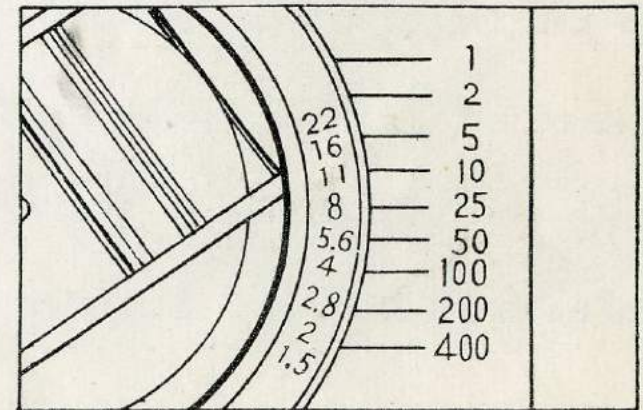

(D)

Focusing

Look through the Aires "trimming" range-viewfinder. You will see two bright illuminated frames with a large bright dot of light in the center. Inside the bright dot two images will be seen of the subject as can be seen from an example in the top right picture. By turning the focusing knob these two images can be made to merge as illustrated in the bottom right picture. At this point the object is in sharp focus. The procedure is the same with the Standard and Wide-Angle lens but as mentioned on page 18 focusing is easier by turning the lens barrel when using the Telephoto lens.



Holding the Camera When Taking Pictures

(A) Ordinary Horizontal Position

Hold the camera in both hands using the right index finger to operate the shutter release and left index or middle finger to adjust focusing. When using telephoto lens it is advisable to turn the lens barrel instead of focusing knob. To look through the viewfinder either the left or the right eye will do. Use whichever is convenient to you. Stabilize the camera by holding it so that the left hand thumb is pressed against your cheek.



(B) Vertical Position

There are two ways to hold the camera for shooting vertical pictures.

One is with shutter release above your eyes, (that is with your right hand above the camera).

The other is with the shutter release below eyelevel. When



the camera is held in the former way, the shutter release can be pressed with your right index or middle finger and film winding done without moving the camera from its shooting position. However, since the camera is held high, it is somewhat unstable especially for slow exposures. If the camera is held in the latter manner, the shutter release is pressed with your thumb. When winding the film, your thumb is also used and has to be moved



away from shutter release each time you wind the film. This position, however, is the more stable. Both ways have merits and there are pros and cons on them even among professionals. You must choose for yourself which suits you better, It is also up to you to decide which eye you can use more conveniently.

Framing

With the Standard lens the outer bright illuminated frame is used to compose the picture. For subjects between $3\frac{1}{8}$ ft. to $2\frac{2}{3}$ ft. use the parallel parallax correction marks as a substitute for the top of the frame (standard lens). The center frame marks are for use with the Aires Tele Coral lens and the entire viewfinder is used with the 35mm Wide-Angle, W Coral lens. With telephoto and wide angle lenses parallax may be compensated by a proportionate amount.


Taking the Picture

With the subject in sharp focus and properly framed you are ready to take the picture. Press, gently, the shutter release on the top right of the camera, something like the trigger of a rifle. Press downward slowly until about half way and then at the precise moment of best expression or of peak action press all the way. A quiet click will be heard and you'll know the film has been exposed. Do not advance the rapid advance lever immediately unless you want to take another picture in the next few moments. By not winding the film immediately you preserve the life of the shutter mechanism.


Unloading the Camera

As each picture is taken it is recorded in the film exposure counter window. When the counter reaches 20 or 36, depending upon the length of roll, set the selector knob to "R" by depressing the locking pin and turning knob (A). Fold out the rapid rewind crank (B). Rewind


the film into the film cartridge by turning the crank clockwise (in direction of the arrow) until no tension is felt on the crank. The film is now fully rewound. Return knob to "A" (C).

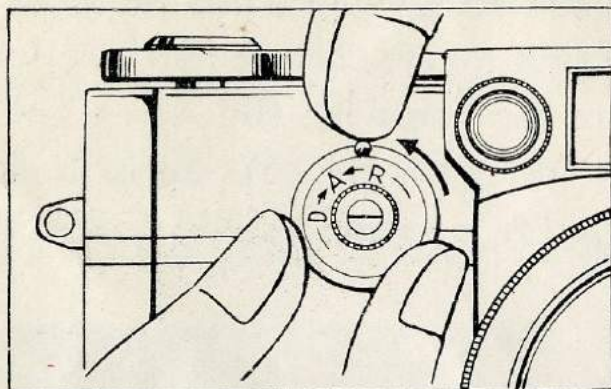

(A)

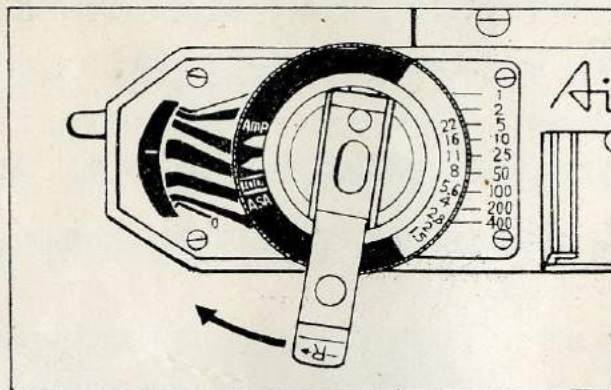


(B)

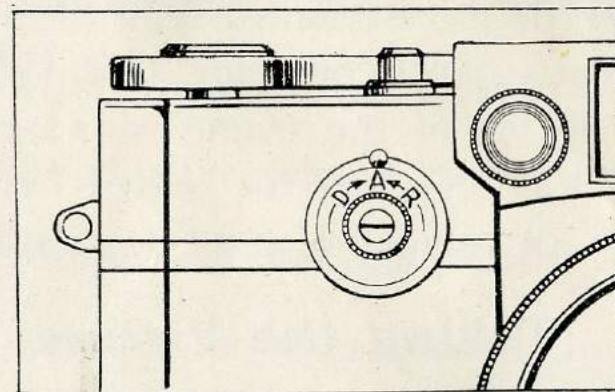


(C)


Unlock the back cover (D), and pull up the rewind crank shaft (E). With the back fully open and the rewind crank and shaft in the "up" position the camera is turned over and the film will drop out of its own accord or it may be taken out as shown in (F).

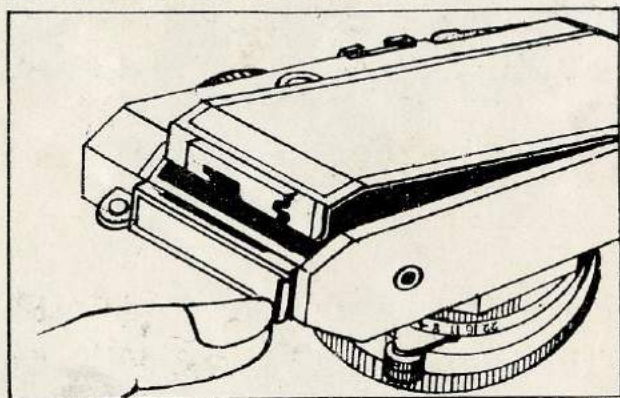

(D)

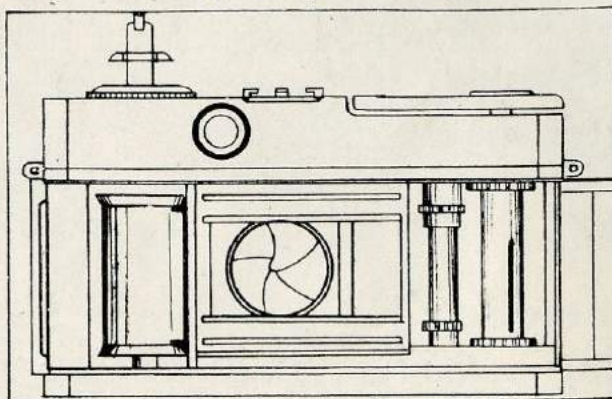

(E)

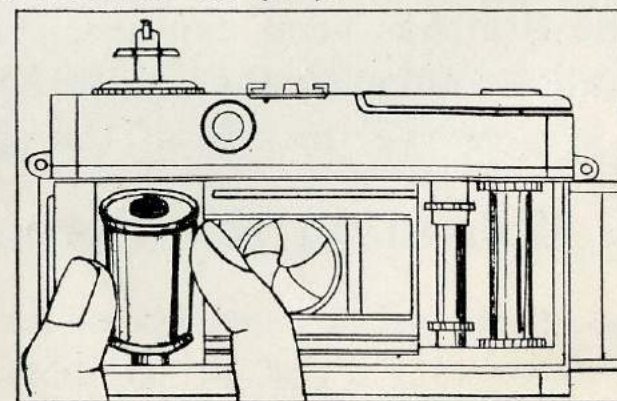

(F)

MISCELLANEOUS INFORMATION

Self-timer and Cable Release


If the shutter speed is slower than $1/25$ sec. use of cable release is advisable. The cable release or the self-timer should be screwed into the cable release socket on the shutter release before the shutter is cocked. If they are screwed in after the shutter has been cocked you might accidentally trip the shutter.

Depth of Field of Photographic Lenses and their Utilization

Photographic lenses have a tendency to be in focus in front of and behind the subject focused on. For instance, if you focus on a person 10 feet away a dog closer than 10 feet and flowers further than 10 feet may also be in acceptable sharp focus. The range from the front limit to the rear limit in acceptable sharp focus is called the Depth of Field of a lens. This range is shallow in the foreground and deep in the background and the limits varies with different lenses and also with the different apertures and distances as you can see from the Depth of Field Chart found elsewhere in this booklet.

In actual work the control of the Depth of Field serves as a tool to achieve desired effects and is utilized in the following two ways.

1. To get a sharp image of subjects located at different distances from the camera. Using a Depth of Field Chart will enable you to control what will or what will not be sharp in your picture.
2. To limit sharpness, to concentrate attention on a certain part of the picture by having it sharp, making everything else blurred. Practice will teach you how to use and control this feature of the lens' depth of field.

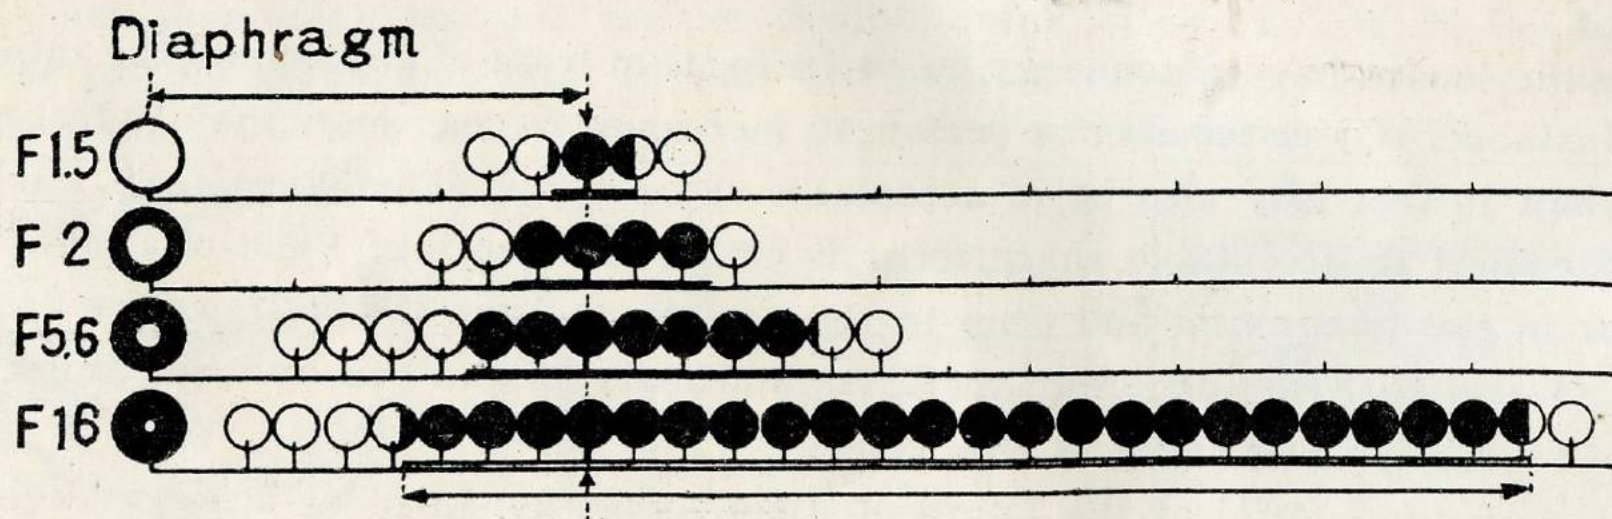

Depth of Field Chart

(AIRES S CORAL 1:1.5 f=4.5cm)

(AIRES H CORAL 1:1.8 f=4.5cm)

(FEET)

F	Dist.	2 ² / ₃		3		3 ¹ / ₃		4		5		7		10		15		30		∞	
	Depth	ft.	in.	ft.	in.	ft.	in.	ft.	in.	ft.	in.	ft.	in.	ft.	in.	ft.	in.	ft.	in.	ft.	in.
1.5	Front	2	7 ¹ / ₂	2	11 ³ / ₈	3	3 ¹ / ₈	3	10 ³ / ₄	4	10 ¹ / ₈	6	8 ³ / ₈	9	4 ⁵ / ₈	13	7 ⁷ / ₈	25	1	151	11
	Rear	2	8 ¹ / ₂	3	5 ⁵ / ₈	3	5 ⁷ / ₈	4	1 ¹ / ₄	5	2	7	4	10	8 ³ / ₈	16	7 ¹ / ₂	37	4	∞	
1.8	Front	2	7 ³ / ₈	2	11 ¹ / ₄	3	3	3	10 ⁵ / ₈	4	9 ³ / ₄	6	7 ⁵ / ₈	9	3 ¹ / ₄	13	5	24	3	126	7
	Rear	2	8 ⁵ / ₈	3	7 ⁷ / ₈	3	5	4	1 ¹ / ₂	5	2 ³ / ₈	7	4 ⁷ / ₈	10	10 ¹ / ₄	17	1 ¹ / ₈	39	3 ³ / ₄	∞	
2	Front	2	7 ³ / ₈	2	11 ¹ / ₈	3	2 ⁷ / ₈	3	10 ³ / ₈	4	9 ⁵ / ₈	6	7 ¹ / ₈	9	2 ³ / ₈	13	3	23	9	113	11
	Rear	2	8 ³ / ₄	3	7 ⁷ / ₈	3	5 ¹ / ₈	4	1 ³ / ₄	5	2 ³ / ₄	7	5 ¹ / ₂	10	11 ¹ / ₂	17	3	40	9	∞	
2.8	Front	2	7	2	10 ³ / ₄	3	2 ¹ / ₂	3	9 ³ / ₄	4	8 ⁵ / ₈	6	5 ³ / ₈	8	10 ⁷ / ₈	12	8	22	0	81	6
	Rear	2	9	3	1 ³ / ₈	3	5 ⁵ / ₈	4	2 ¹ / ₂	5	3 ⁷ / ₈	7	7 ⁷ / ₈	11	4 ³ / ₄	18	4	47	5	∞	
4	Front	2	6 ⁵ / ₈	2	10 ¹ / ₄	3	1 ⁷ / ₈	3	8 ⁷ / ₈	4	7 ¹ / ₄	6	2 ⁷ / ₈	8	6 ¹ / ₈	11	11	19	8	57	2
	Rear	2	9 ¹ / ₂	3	2	3	6 ³ / ₈	4	3 ⁵ / ₈	5	5 ³ / ₄	7	11 ³ / ₄	12	1 ³ / ₈	20	4	63	2	∞	
5.6	Front	2	6	2	9 ⁵ / ₈	3	1	3	7 ³ / ₄	4	5 ¹ / ₂	5	11 ³ / ₄	8	1 ¹ / ₂	11	0	17	4	40	11
	Rear	2	10 ¹ / ₄	3	2 ³ / ₄	3	7 ¹ / ₂	4	5 ¹ / ₈	5	8 ¹ / ₄	8	5 ¹ / ₄	13	2 ³ / ₄	23	8	112	8	∞	
8	Front	2	5 ³ / ₈	2	8 ⁵ / ₈	2	11 ⁷ / ₈	3	6 ¹ / ₈	4	3	5	7 ⁵ / ₈	7	5	9	11	14	8	28	9
	Rear	2	11 ¹ / ₄	3	4 ¹ / ₈	3	9 ¹ / ₄	4	7 ³ / ₄	6	5 ⁵ / ₈	9	3	15	4 ¹ / ₈	31	5	∞		∞	
11	Front	2	4 ³ / ₈	2	7 ¹ / ₂	2	10 ⁵ / ₈	3	4 ³ / ₈	4	3 ³ / ₈	5	3	6	9 ¹ / ₄	8	9	12	4	21	0
	Rear	3	5 ⁵ / ₈	3	6	3	11 ¹ / ₂	4	11 ¹ / ₄	6	6 ³ / ₄	10	6	19	1 ¹ / ₂	52	9	∞		∞	
16	Front	2	3 ¹ / ₈	2	5 ⁷ / ₈	2	8 ¹ / ₂	3	1 ⁵ / ₈	3	8 ⁵ / ₈	4	8 ³ / ₄	5	11	7	5	9	10	14	6
	Rear	3	3 ¹ / ₈	3	9 ³ / ₈	4	3 ⁷ / ₈	5	6 ¹ / ₄	7	7 ¹ / ₂	13	6	32	2 ¹ / ₂	∞		∞		∞	

Depth of Field Chart

(AIRES TELE CORAL 1:3.5 f=10cm)
(FEET)

F	Dist. Depth	7	10	15	30	∞
3.5	Front	ft. in. 6 10 ^{1/4}	ft. in. 9 8 ^{3/8}	ft. in. 14 4	ft. in. 27 5	ft. in. 313 2
	Rear	7 1 ^{7/8}	10 3 ^{7/8}	15 9	33 2	∞
4	Front	6 10	9 7 ^{7/8}	14 2 ^{3/4}	27 1 ^{1/2}	274 1
	Rear	7 2 ^{1/8}	10 4 ^{1/2}	15 10 ^{1/4}	33 8	∞
5.6	Front	6 9 ^{1/8}	9 6 ^{1/4}	13 11 ^{1/4}	26 1 ^{1/2}	196 0
	Rear	7 3	10 6 ^{3/8}	16 2 ^{3/4}	35 5	∞
8	Front	6 8	9 3 ^{7/8}	13 6 ^{1/2}	24 7 ^{1/2}	137 5
	Rear	7 4 ^{1/2}	10 9 ^{3/8}	16 10	38 4 ^{1/2}	∞
11	Front	6 6 ^{1/2}	9 1 ^{1/8}	13 3 ^{3/4}	23 1	100 1
	Rear	7 6 ^{1/4}	11 1 ^{1/4}	17 7 ^{1/2}	42 10	∞
16	Front	6 4 ^{1/4}	8 8 ^{7/8}	12 4	20 11	69 0
	Rear	7 9 ^{3/8}	11 8 ^{1/4}	19 2	53 0	∞
22	Front	6 1 ^{3/4}	8 4 ^{1/8}	11 6 ^{3/4}	18 9 ^{3/4}	50 5
	Rear	8 1 ^{1/2}	12 5 ^{5/8}	21 4 ^{1/4}	74 2	∞

Depth of Field Chart **(AIRES W CORAL 1:3.2 f=3.5cm)**

(FEET)

F	Dist. Depth	$2\frac{2}{3}$	3	$3\frac{1}{3}$	4	5	7	10	15	30	∞
3.2	Front	2 $6\frac{1}{8}$	2 $9\frac{5}{8}$	3 $1\frac{1}{8}$	3 $7\frac{7}{8}$	4 $5\frac{5}{8}$	6 $\frac{1}{8}$	8 1	11 $\frac{3}{4}$	17 $6\frac{1}{4}$	42 2
	Rear	2 $10\frac{1}{8}$	3 $2\frac{3}{4}$	3 $7\frac{3}{8}$	4 5	5 8	8 $4\frac{3}{4}$	13 $1\frac{3}{8}$	23 3	104 5	∞
4	Front	2 $5\frac{3}{4}$	2 $9\frac{1}{8}$	3 $\frac{1}{2}$	3 7	4 $4\frac{1}{4}$	5 $9\frac{5}{8}$	7 $8\frac{5}{8}$	10 $4\frac{5}{8}$	15 $10\frac{1}{2}$	33 9
	Rear	2 $10\frac{3}{4}$	3 $3\frac{1}{2}$	3 $8\frac{3}{8}$	4 $6\frac{3}{8}$	5 $10\frac{3}{8}$	8 10	14 $2\frac{1}{2}$	27 0	271 1	∞
5.6	Front	2 $4\frac{7}{8}$	2 $8\frac{1}{8}$	2 $11\frac{1}{4}$	3 $5\frac{1}{4}$	4 $1\frac{3}{4}$	5 $\frac{1}{8}$	7 $\frac{7}{8}$	9 $3\frac{1}{8}$	13 $4\frac{5}{8}$	24 2
	Rear	2 $11\frac{7}{8}$	3 5	3 $10\frac{3}{8}$	4 $9\frac{1}{2}$	6 $3\frac{5}{8}$	9 $10\frac{1}{4}$	17 $\frac{3}{4}$	39 7	∞	∞
8	Front	2 $3\frac{3}{4}$	2 $6\frac{5}{8}$	2 $9\frac{1}{2}$	3 $2\frac{7}{8}$	3 $10\frac{3}{8}$	4 $11\frac{1}{2}$	6 $3\frac{5}{8}$	7 $11\frac{5}{8}$	10 $10\frac{1}{8}$	16 12
	Rear	3 $1\frac{7}{8}$	3 $7\frac{5}{8}$	4 $1\frac{3}{4}$	5 $2\frac{3}{4}$	7 1	11 $10\frac{7}{8}$	24 4	128 10	∞	∞
11	Front	2 $2\frac{3}{8}$	2 5	2 $7\frac{5}{8}$	3 $\frac{3}{8}$	3 $6\frac{7}{8}$	4 $5\frac{3}{4}$	5 $6\frac{1}{2}$	6 $9\frac{1}{2}$	8 $9\frac{3}{8}$	12 5
	Rear	3 $4\frac{3}{4}$	3 $1\frac{3}{8}$	4 $6\frac{5}{8}$	5 $10\frac{3}{4}$	8 $4\frac{1}{2}$	16 $\frac{5}{8}$	51 6	∞	∞	∞
16	Front	2 $\frac{1}{2}$	2 $2\frac{3}{4}$	2 $4\frac{7}{8}$	2 $8\frac{7}{8}$	3 2	3 $10\frac{3}{8}$	4 $7\frac{1}{2}$	5 $5\frac{5}{8}$	6 $8\frac{1}{4}$	8 $7\frac{1}{4}$
	Rear	3 $10\frac{3}{8}$	4 $7\frac{1}{4}$	5 $5\frac{1}{4}$	7 $5\frac{5}{8}$	11 $11\frac{1}{4}$	37 6	∞	∞	∞	∞
22	Front	1 $10\frac{1}{2}$	2 $\frac{1}{2}$	2 $2\frac{1}{4}$	2 $5\frac{1}{2}$	2 $9\frac{1}{2}$	3 $3\frac{7}{8}$	3 $10\frac{1}{2}$	4 $5\frac{3}{8}$	5 $2\frac{5}{8}$	6 $3\frac{7}{8}$
	Rear	4 $7\frac{3}{8}$	5 $8\frac{1}{2}$	7 $\frac{5}{8}$	10 $10\frac{3}{4}$	23 11	∞	∞	∞	∞	∞


THE CARE OF YOUR CAMERA

The accuracy of the shutter mechanism will be effected if you leave the shutter cocked for long periods of time. With the Aires 35-V film winding and shutter cocking are done simultaneously, so you must be even more careful not to leave the shutter cocked, especially at a high speed.

After each shooting session the distance scale should be returned to infinity— ∞ —before front cover of eveready case is closed.

Even when the shutter is not cocked its auxiliary spring will be under pressure at 1/400 sec., so change the setting to other than 1/400 before storing the camera away.


The unprotected area of the Coral lenses for Aires 35-V is quite large and should be protected against the ravages of wind borne grit and salt water. When not in use the lens cap should be replaced. In use it is advisable to use a UV filter to protect the front element from scratches and oily fingerprint marks.

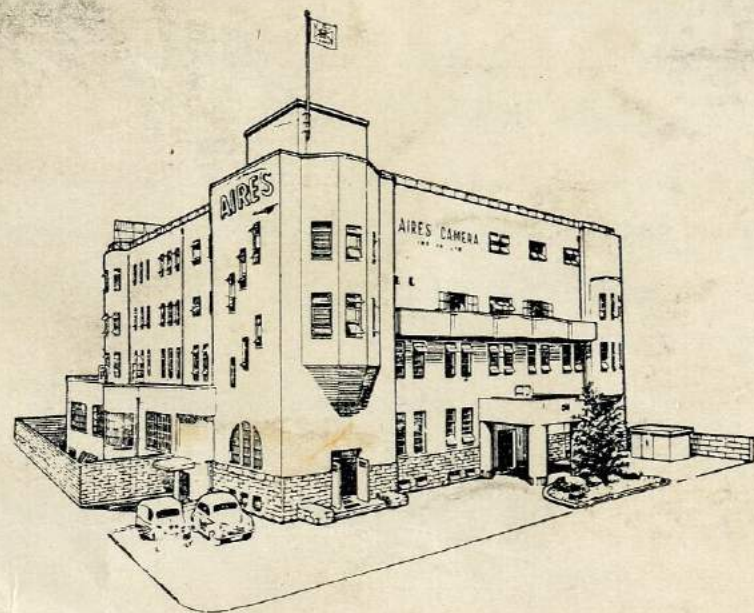

Manufacturers & Exporters
AIRES CAMERA IND. CO., LTD.


No. 437, 1-Chome, Nishiokubo,
Shinjuku-ku, Tokyo, Japan


Printed in Japan

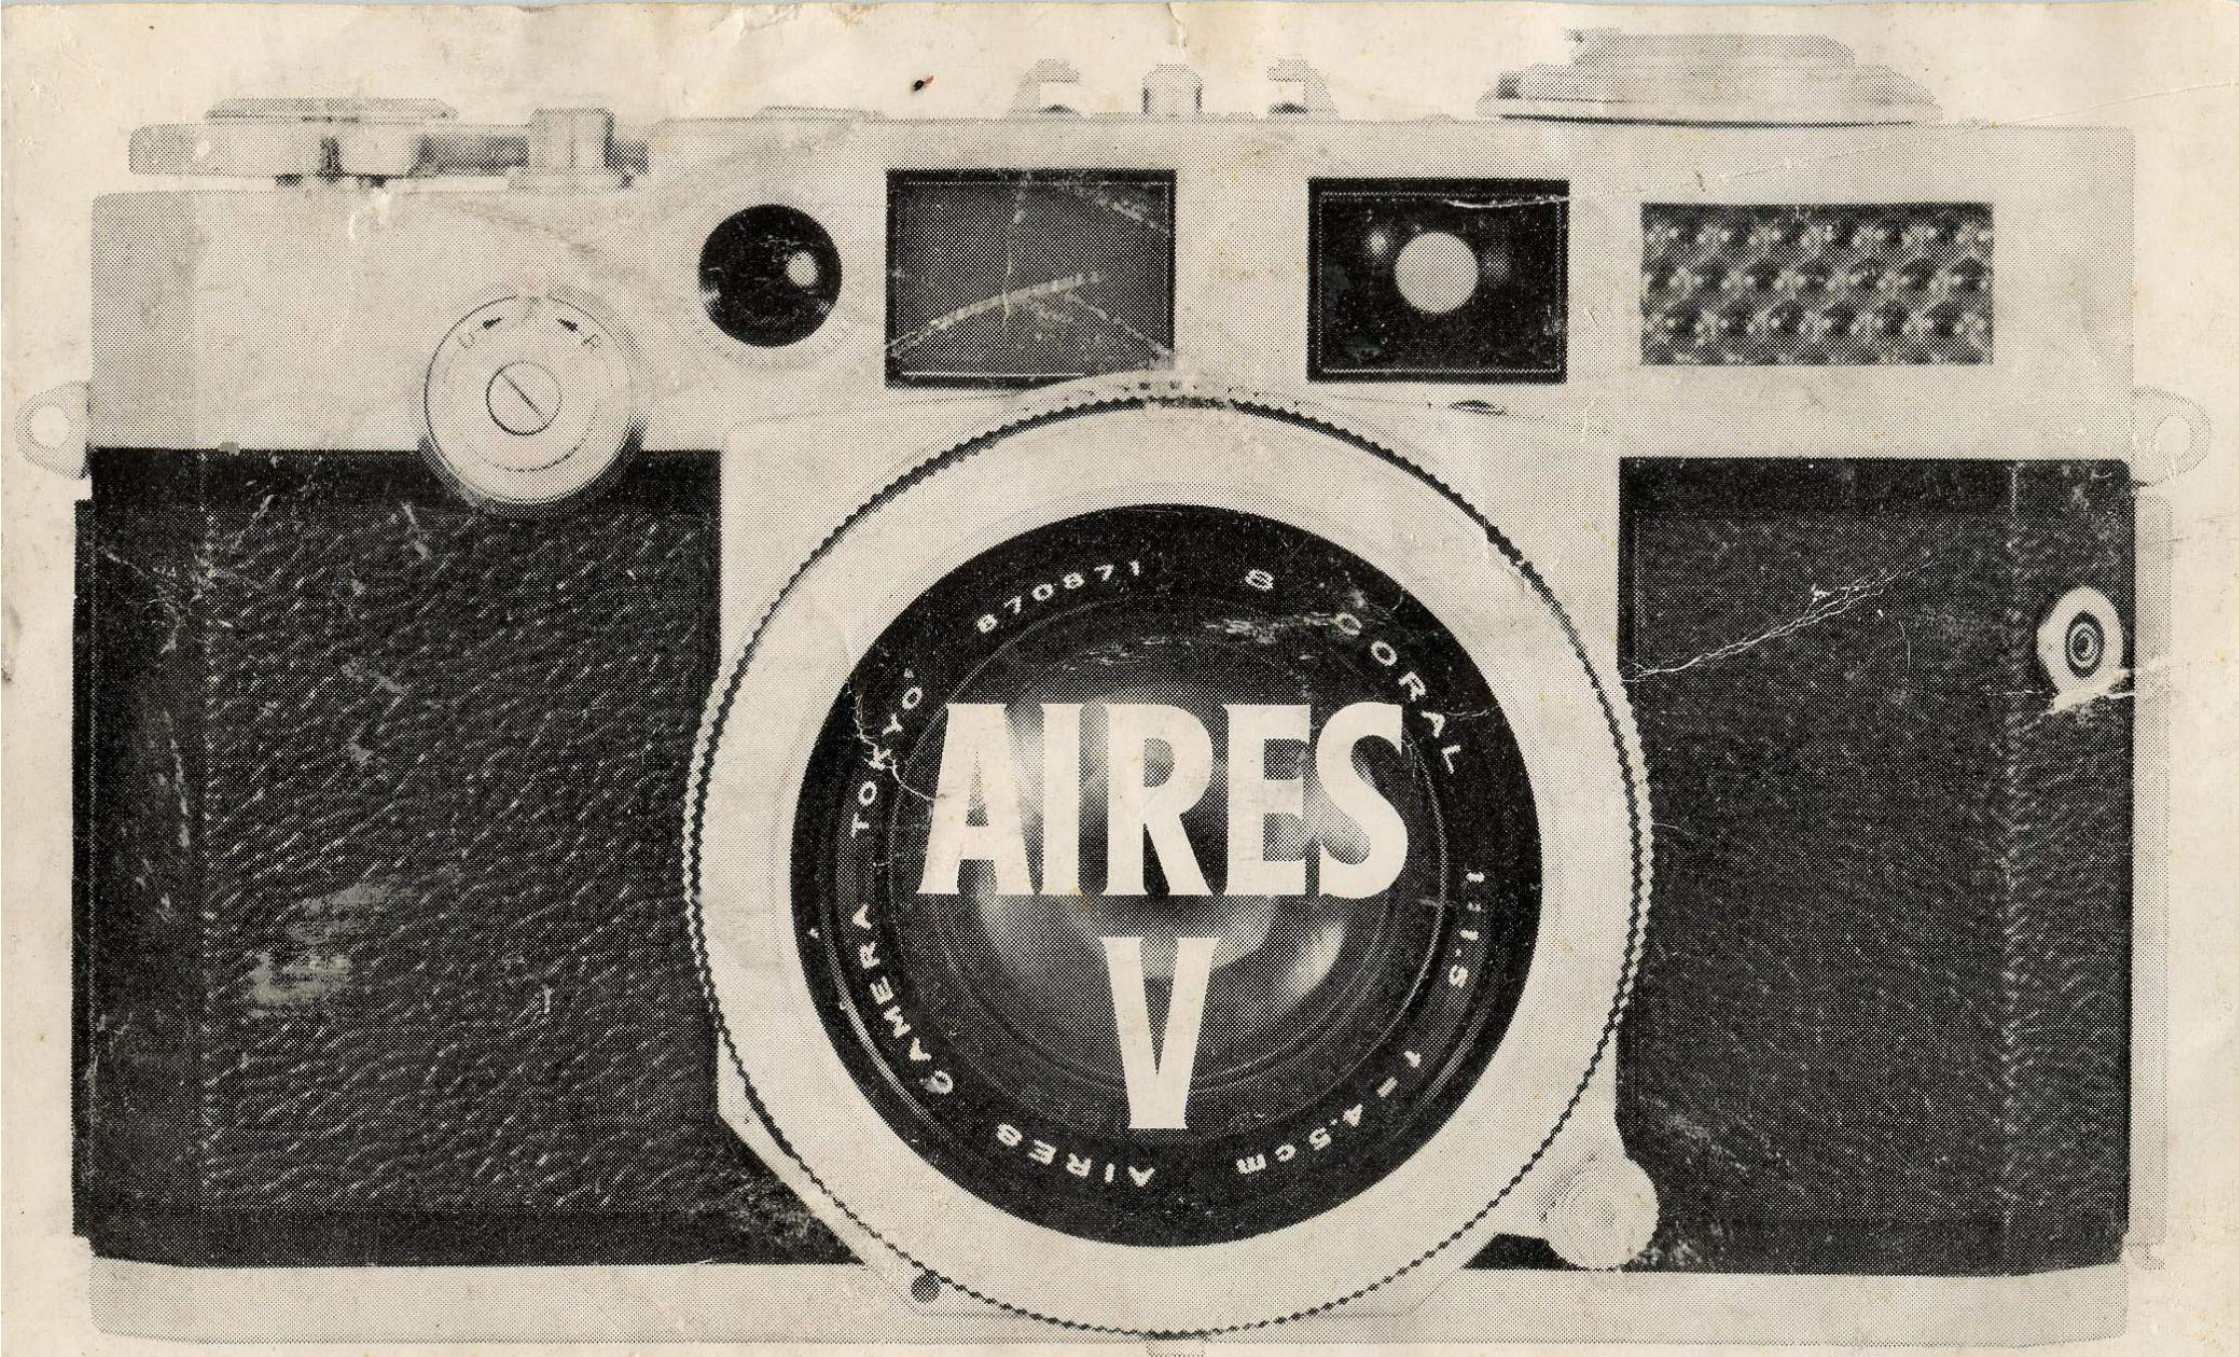

**Quality you can feel and these
features make the AIRES V
a versatile instrument**

1. Built-in light meter.
2. Light indicator.
3. Meter scales visible from above.
4. Rewind lever.
5. Range and viewfinder rear window.
6. Viewfinder.
7. Normal, wide-angle and telephoto frame lines.
8. Accessory shoe.
9. Rangefinder window.
10. Shutter release.
11. Film wind and shutter lever.
12. Automatic exposure counter.
13. Rewind and intentional double exposure dial.
14. Permanent take-up spool.
15. Focusing knob.
16. All settings visible from above.
17. Behind-the-lens shutter.
18. Bayonet mount for Aires V lenses.
19. MX setting.
20. Oversize pressure plate.
21. Tripod socket.
22. Release for hinged back.
23. Flash cord socket.
24. Ring for neck strap.

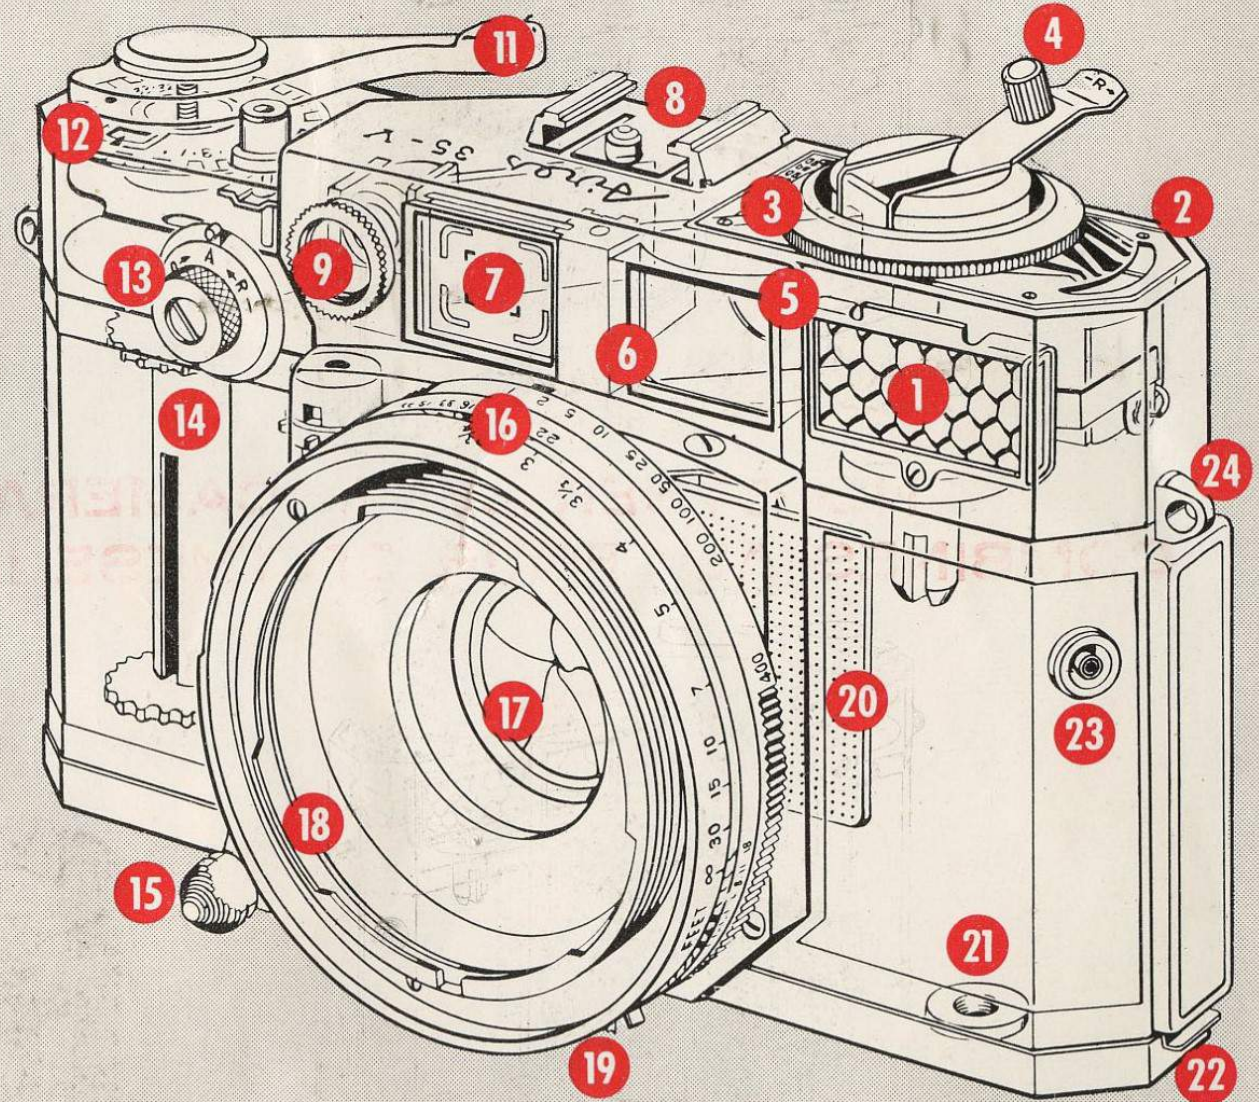

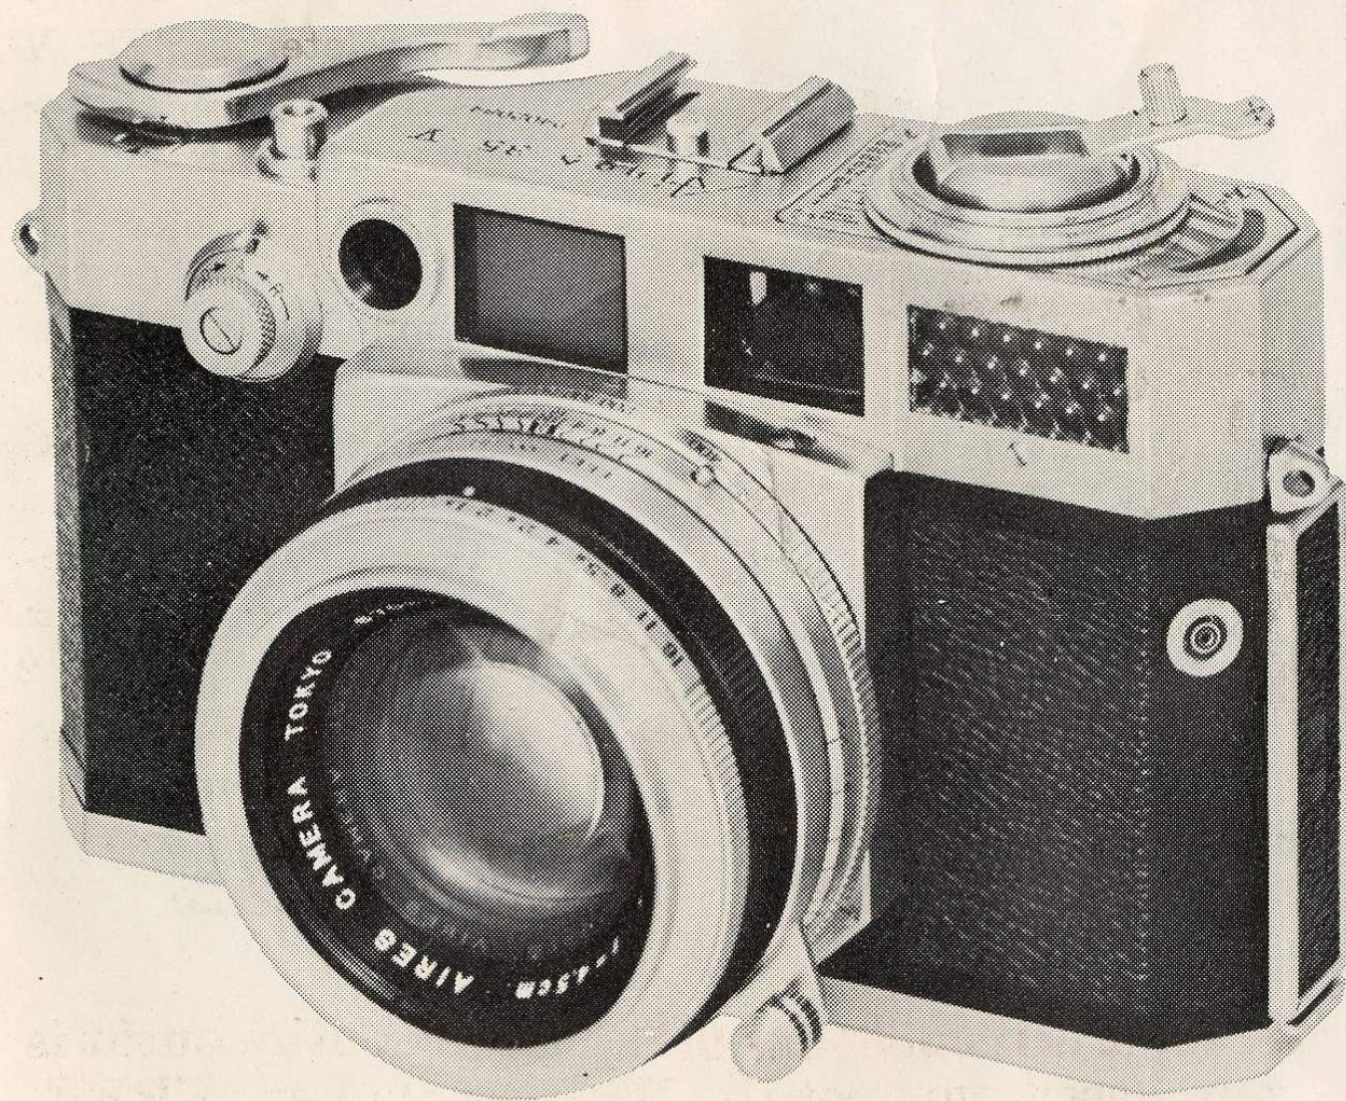

The New

AIRES V

Only Aires could bring you the marvel of a camera with the precision construction, versatility and handling ease of \$400 cameras... and do it at the sensible price of \$159.50.

Case packaged with camera, \$15

100mm f:3.5 telephoto lens



Fast, razor sharp, well-balanced, smooth helical focusing. A perfect focal length for portraits and "candid". \$89.50. Case included.

35mm f:3.2 wide-angle lens



Distortion-free, lightweight mount, easy-to-read markings, click stops, razor sharp definition. \$59.50. Case included.

AIRES V "CORRESPONDENT CASE" OUTFIT




Complete AIRES V outfit for every photographic situation, priced less than the cost of other fine top 35mm cameras *alone*. "Correspondent Case" outfit contains AIRES V Camera, Camera Case, 100mm Telephoto Lens, 35mm Wide-Angle Lens, 2 Filters, 2 Sunshades, Compartment Case.


\$383.25

SPECIAL INTRODUCTORY OFFER. When entire outfit is purchased, you get the Wide-Angle Lens **FREE**. (Limited time only.)


1. Built-in light meter

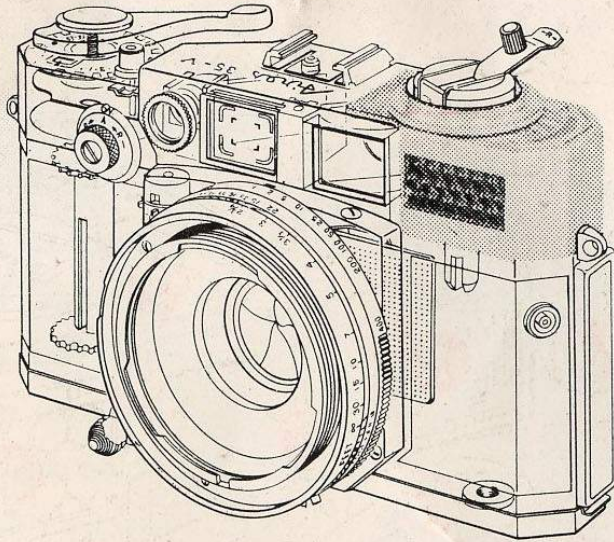

2. Built-in viewfinders

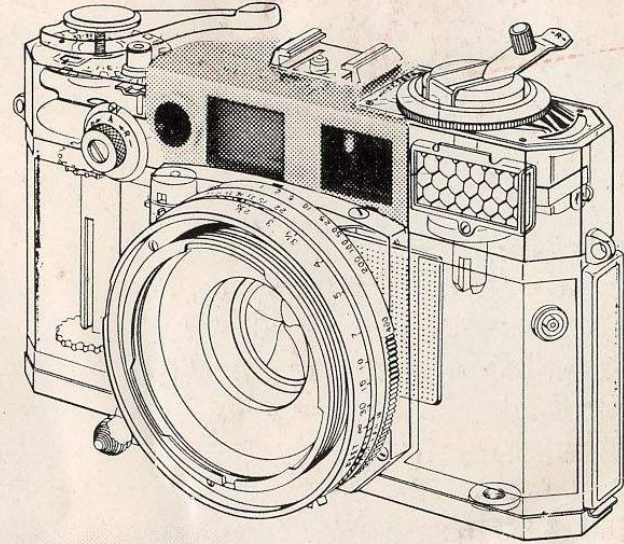

**NO OTHER 35MM CAMERA AT ANY PRICE
COMBINES ALL FOUR OF THESE IMPORTANT FEATURES!**

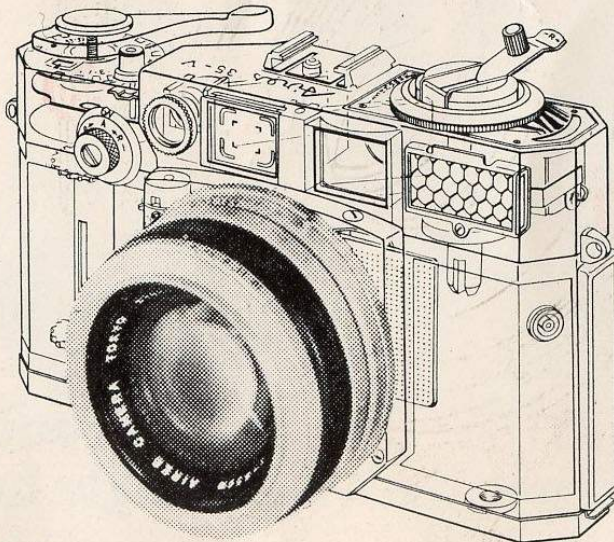

3. Fast f:1.5 lens



4. Lens


Interchangeability

OTHER FINE AIRES CAMERAS AND ACCESSORIES!



A.
AIRES IIIIC


with automatic parallax compensation, self-timer, f:1.9 lens, 1/500 sec. MFX shutter with EVS \$110. Case packaged with camera, \$13.50.

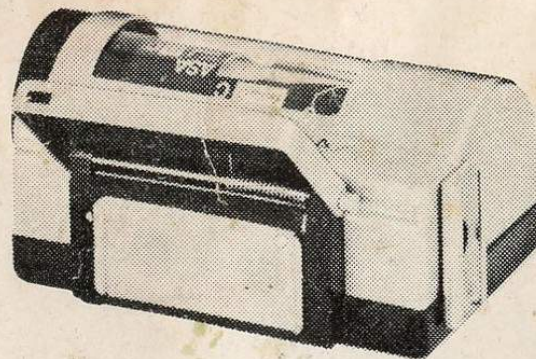

B. AIRES CLIP-ON METER
for AIRES "C" and "L" models, w/case, \$12.95. **BOOSTER** w/case, \$3.95.



C. AIRES AUX. TELEPHOTO LENS
converts regular lens to 11-element, 90mm f:1.9. Complete with finder and leather cases, \$59.95.

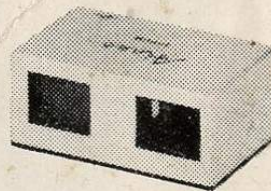

Also available: **AIRES CLOSE-UP KIT** with case, \$24.95. **AIRES IIIL**, \$99.50; case w/camera, \$12.50.

A PRODUCT OF

Kalimar

1909 S. Kingshighway
St. Louis 10, Missouri